

## Using Cruise Control in GP5

### What is Cruise Control?

It is a system that controls the speed of the vehicle at a set value without the driver's involvement. So you can take away your foot from the accelerator pedal.

### When it can be used?



- Speed between 30~100 km/h
- Shift position – D
- Should be used in a suitable road

### When NOT to use?


- Road with heavy traffic
- Steep downhills
- Slippery Roads

### How to Activate / Set


1. Press the “Cruise” Button on the steering wheel. The “Cruise Main” Indicator will lit up in the information display stating that the system is active.

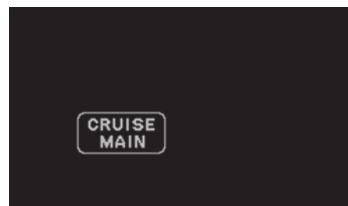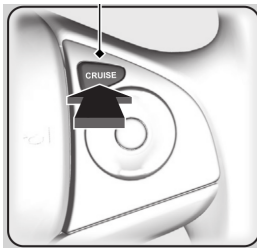

2. Then accelerate the vehicle up to the speed you want to be kept constant. When the desired speed is approached, press the “SET -” button on the steering wheel. A second indicator stating “Cruise Control” will be lit. Now you can take your foot away from the accelerator.

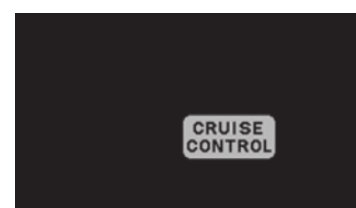


3. If you want to increase or decrease the set speed at this stage, it can be done by pressing “RES + / SET -” buttons accordingly.
  - Press Once = Increase / Decrease speed by 1.5 km/h
  - Press and hold = Continuously Increase / Decrease speed by 1.5 km/h steps. Release when the desired speed achieved.

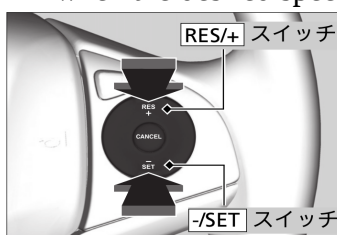

## How to Turn OFF the system

This can be done by,

1. Pressing the “Cruise” button on the steering wheel (Completely deactivates the system)
2. Pressing the “Cancel” button on the steering wheel
3. Stepping on the Brake Paddle (Temporary deactivation)
4. The system automatically deactivates if the vehicle speed goes below 25 km/h

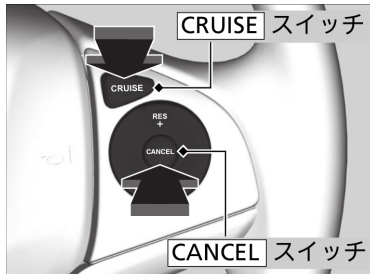

## Resetting the speed limit after stepping on the brake paddle

If the vehicle speed has not gone below 25 km/h and it is above 30 km/h, you can reset the system to the previously set speed limit by pressing the “RES / +” Button once on the steering wheel.

